


Integ R Series

The Power Reader



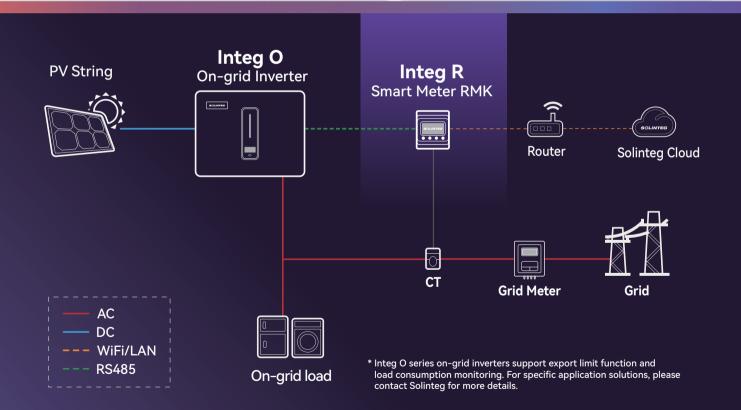

Solinteg smart meter with two versions of RMM and RMK, is used in the whole energy system management and monitor, providing the real-time information.

MODEL	RMM-MA	RMK-MA	RMM-5A	RMK-5A
Signal and power input				
Rated voltage	230/400V , 1/3~			
Voltage input impedance	>1MΩ			
Rated current	≤100mA	≤100mA	≤5A	≤5A
Sampling current overload	Continue: 1.2 times; instantaneous: 2times / 10s			
Rated frequency	50/60 Hz			
Accuracy				
Current/Voltage	0.50%			
Frequency	±0.01Hz			
Active power	Class 0.5S			
Reactive power	Class 0.5S			
Energy	Class 0.5S			
General data				
Dielectric strength	Resistanc	e from signal, power supply	and output terminal to sh	nell >100MΩ
Withstand voltage	Input and power supply >1.5kV			
Communication	Modbus RTU (RS485)	Modbus RTU (RS485) WiFi/LAN	Modbus RTU (RS485)	Modbus RTU (RS485 WiFi/LAN
Display	OLED	OLED	OLED	OLED
Voltage power consumption	<5VA	<7.5VA	<5VA	<7.5VA
Terminal capacity	0.5~4mm²			
Size (L*W*H)	85*54*75mm			
Weight	220g			
Protection class	IP20 (For Indoor Use)			
Installation method	35mm DIN Rail			
Operating temperature	-30 ~ +60°C			
Operating humidity	<95%, No Condensation			
Operating altitude	<3000m			
Grid type and rated voltage	Three-phase (With 3CT) Delta (Three-phase four-wire): 380/400V/415V(L-L), 208/220/240V(L-L) Wye (Three-phase three-wire): 380/400V/415V(L-L), 208/220/240V(L-L) Split-phase (With 2CT) Split (Two-phase three-wire): 220/230/240V(L-L) Single-phase (With 1CT)			
	110/120/127/(L-N) 220/230/240V(L-N)			

 $RMM-MA/RMK-MA \ are \ available \ in \ single-phase \ and \ three-phase \ versions. \ Please \ confirm \ before \ placing \ your \ order.$

 $[*]RMM-MA/RMK-MA\ will\ be\ delivered\ with\ matched\ CT(s).\ CT\ model: 120A\Phi16, 200A\Phi24, 300A\Phi35 (optional);$

^{**}RMM-5A/RMK-5A is not delivered with CT. CT requirements:secondary side output of 5A, CT accuracy of 0.5 and max.CT conversion ratio of 5000:5;